



Fenetex Smart Motor Programming

Pairing motor to remote:

- Select desired channel on remote
- Power on motor
- 1 jog and 3 beeps will happen
- Press and hold the (-) stop button on 2secs, the motor will jog 2 times and beep 3 times to confirm pairing is complete
- Press and release up or down button to confirm remote is paired with the motor on the correct channel.

Changing direction of motor:

- If motor is rotating in the wrong direction press and hold the up and down button together for 2 secs
- Motor will jog to confirm change of direction
- Press and release up or down button to confirm motor rotation change.

Setting Upper Limit:

- Press and hold up button for 1 sec until shade starts to move towards top
- Stop shade close to upper limit, then fine tune limit by pressing and releasing up button until desired upper limit is reached
- Save upper limit by pressing and holding up and (-) stop for 2 secs
- Motor will confirm limit setting by jogging 2 times and beeping 3 times

Setting Lower Limit:

- Press and hold (-) stop button and either up or down button depending on limit needing to be reset for 5 secs. (hold up for up, down for down)
- Go to new desired limit, press and hold (-) stop button and either up or down (must be the same as before) to exit program mode and confirm new limit setting.

Add new remote:

- On back of remote, remove cover and access area around battery
- Around the battery is a (p2) button in the top left or right side of the battery, either button will work for this and any other (p2) applications
- The remote already paired with motor will be considered remote "a", the remote to be paired will be "b" for this application



- Press and release (p2) once for 1sec on “a” and a beep will sound, then press and release (p2) again for 1 sec on “a” another beep will sound
- Making sure you are on the same channel and “a”, press and release (p2) on “b” for 1 sec, motor will beep 3 times to confirm cloning
- Repeat with all additional motors, making sure to select the same channel on each remote.

Deleting a Remote:

- Press and release (p2) twice for 1sec on “a”
- Press and release (p2) once on “b”, this will remove the “b” remote.

Deleting all Remotes:

- On remote “a” press and release (p2) button, then press and release (-) stop button, then press and release (p2) button
- Motor will beep 3 times and no transmitter will work. (This doesn’t clear the limits in the motor, just deletes the remotes.)

Clearing Limits:

- On remote “a” press and release (p2) button, then press and release down button, then press and release (p2) button.
- Motor will jog 2 times and beep 3 times
- Limits can now be reprogrammed if necessary.